

## Connection instructions for SailClever cable with Nexus Server

Connection to Nexus Instruments is very straight forward. You need to connect two cables

1. The null modem data cable (you must use this cable)
2. The micro-usb power supply cable

Plug the null modem data cable into the RS232 port at the bottom of the server. Next you have to wire the dongle power supply cable (micro-usb) into the instruments power supply (or some other 12V source). Connect the red wire to +12V (pin 1) and the black wire to 0V (pin 2) on the server.

